

# Operating Instructions

## Electric heater

In an emergency situation (e.g. heating breaks down and you are waiting for it to be fixed) you may be supplied with a temporary **electric heater**. Here are some safety tips for use:

- Disconnect the appliance from the mains when not in use
- Place appliance on a firm and level floor indoors
- Ensure that there is a minimum distance of 1 metre from furniture or curtains
- You must NOT use the heater if it is resting on its front, back or sides
- The heater must NOT be covered at any time and NOT be used as a clothes dryer or used in a moist environment (e.g. kitchen or bathroom) or directly below a plug socket

**If you are still unclear on the use of any appliance please speak to a member of staff.**

**If any appliance does not work – NEVER try to fix it yourself, always report it to reception.**

**And remember NEVER turn on an appliance and leave it unattended.**